
INSTALLATION INSTRUCTIONS:

PERIMETER GASKETING:


Please note: This package contains 1 short (header) piece and 2 long (jamb) pieces of weatherstrip. For ease of installation, install header piece first, then 2 jamb pieces.

- Can be installed on a wood or metal frame.
- Measure, mark and trim header piece to length. Close door and position header piece on header stop so that seal makes light even contact with door. Mark header stop in center of slotted holes.
- 3. Drill pilot holes in header stop at marks.
- Secure header piece to header stop with supplied
- To install the 2 jamb pieces, repeat steps 2, 3, and 4. Jamb pieces should contact threshold (or floor) at bottom & contact header piece at top.
- Open and close door several times to check jamb weatherstrip fit and seal, and to make sure latch bolt engages strike plate.
- 7. To adjust, loosen screws, re-position weatherstrip, and tighten screws.

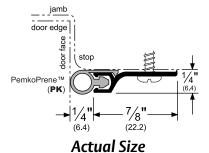

ASTRAGALS/MEETING STILES:

- 1. Trim lengths equal to door height.
- 2. Position at meeting stile edge of doors. Install screws in center of slots.
- 3. Adjust as required for proper seal, with ease of opening and closing, then tighten screws.

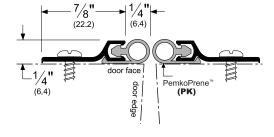



ASSA ABLOY, the global leader in door opening solutions

UNITED STATES:

MEMPHIS, TN Ph: 800.824.3018 Fax: 800.243.3656

VENTURA, CA Ph: 800.283.9988 Fax: 800.283.4050

CANADA:

VANCOUVER, BC Ph: 877.535.7888 Fax: 877.535.7444

TORONTO, ON Ph: 866.243.9816 Fax: 866.243.9817


© 2008 Pemko Manufacturing Co. 303_PK_INS Rev 1 - 08.19.08



Perimeter Gasketing/Split Astragals

DOOR Seals Top & Sides of Door

- Seals against air, dust, water, and sound.
- Screws included.
- Slotted holes for adjustment.



(not to scale larger view inside)

Product / Finish

303_PK

Testing/Ratings









Tools Required



www.pemko.com